

Technical Specifications
of
Dual Source Energy Meter (EB / DG)
(SPMG301)



Class 0.5S

Sai PowerZerve
29/3B , Rajalakshmi Nagar, 1st Main Road,
Velachery Bye Pass, Chennai – 600 042.

Website : www.spowerz.com

Email : info@spowerz.com

Phone : 044- 43192660

General Specifications

1) GENERAL:

- Meter measures Active, Reactive, Apparent energy on 3 phase 4 wire system,
- Separate register for EB and DG to store MD, KWh, KVAh, KVArh (import lag and import lead),
- Shows separate running hours for DG and EB Powers,
- Parameters can be viewed through LCD (3 row),
- Soft Keys are provided to stop, scroll, edit and to view the parameter,
- RTC with battery backup is used for time keeping and has a calendar of 100 years,
- Power Line Communication can be done using RS485 communication with MODBUS RTU,

2) METER FEATURES:

2.1) Display Details:

- LCD type – The parameters are calculated by the meter are displayed,
- Selectable Parameters – Can select any out of 35 parameters.
- Scroll rate – The scroll rate of the display parameter scroll in steps of 4secs.
- Keys are provided to stop, scroll, edit and to view the particular parameter.

2.1.1) Display Parameters:

- Time,
- Date,
- Meter ID with Phase Sequence,
- CT Primary,
- Frequency (Hz.), Source Status EB / DG,
- Cumulative Import Active Energy (KWh – EB),
- Cumulative Import Apparent Energy (KVAh – EB),
- Cumulative Import Reactive Energy (Lag ILG – EB),
- Cumulative Import Reactive Energy (Lead ILD – EB),
- Cumulative Import Active Energy (KWh – DG),
- Cumulative Import Apparent Energy (KVAh – DG),
- Cumulative Import Reactive Energy (Lag ILG – DG),
- Cumulative Import Reactive Energy (Lead ILD – DG),
- Average Power Factor – EB,
- Average Power Factor – DG,
- Power ON hour – EB,
- Power ON hour – DG,
- Load ON hour – EB,

- Load ON hour – DG,
- Voltage L-N (R,Y,B) (V),
- Average Voltage (V),
- Phase to Phase Voltages L-L (RY,YB,RB)
- Line Current (R, Y, B),
- Instantaneous Average Current,
- Instantaneous Power Factor (R, Y, B),
- Combined Power Factor (RYB),
- Instantaneous Active Power – KW – R,Y,B,
- Instantaneous Reactive Power – KVA_r – R,Y,B,
- Instantaneous Apparent Power – KVA – R,Y,B,
- Instantaneous Active Power – KW – RYB,
- Instantaneous Reactive Power – KVA_r – RYB,
- Instantaneous Apparent Power – KVA – RYB,
- Rising Demand – EB (KW / KVA),
- Rising Demand – DG (KW / KVA),
- Maximum Demand – EB (KW / KVA),
- Maximum Demand – DG (KW / KVA)

2.2) Key Features:

- The Parameter setup can be done through 4 nos. of soft keys on front fascia,
- Keys on the front panel is used to
 - ✓ scroll, increment, decrement through display parameter and
 - ✓ set the Meter ID,
 - ✓ CT Primary values,
 - ✓ Time & Date,
 - ✓ MD Reset (EB / DG),
 - ✓ Energy Reset(EB / DG),
 - ✓ Change Password.
- Press scroll key once the parameter set is completed, this allows to view the parameters one after the other automatically (change over time period is 4 secs). If this is not done auto scroll will not happen.

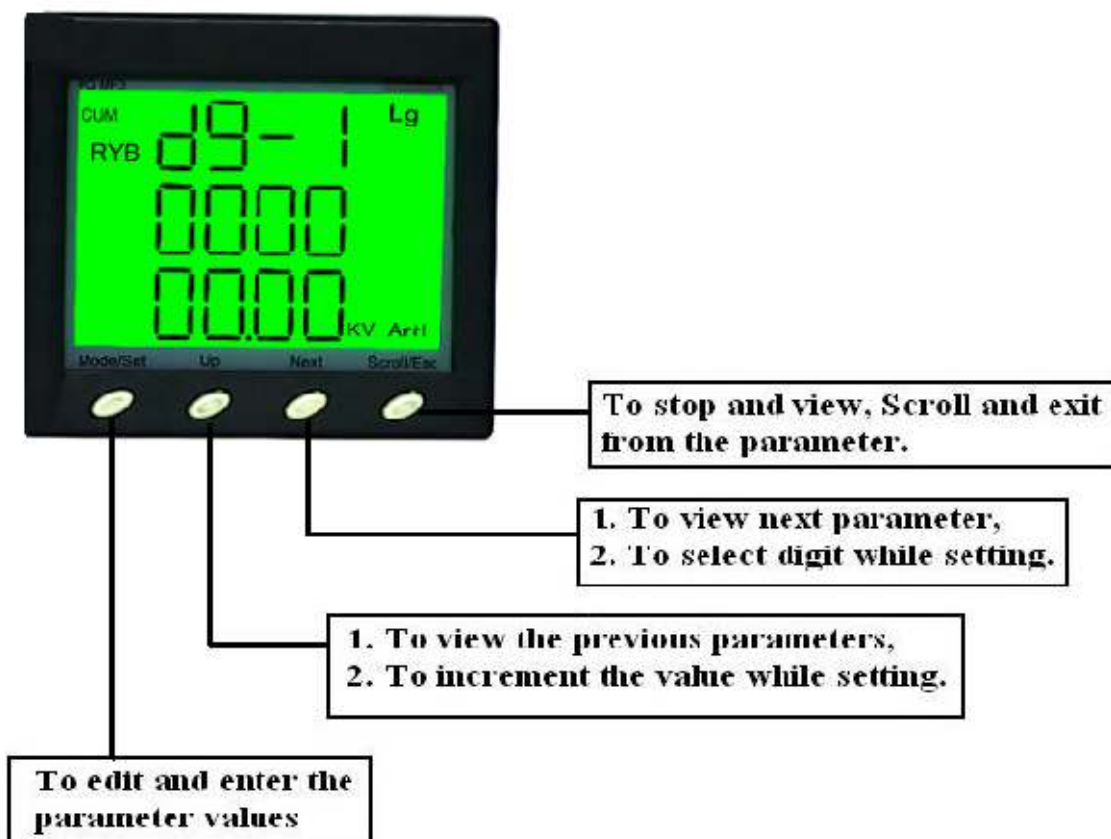



Fig.: Key Feature Description

2.3) Rear Terminal Details:

S ₁ → S ₂	S ₁ → S ₂	S ₁ → S ₂	P/+	N/-			
I _R	I _Y	I _B	AC 110-230V	DC 24 -300V			
Primary CT Programmable ____/1 or 5 A			DG Sense				
<div>Manufactured by</div> <div> Sai PowerZerve Chennai, India. www.spowerz.com</div>							
Meter Name: Dual Source Energy Meter							
Model :							
Serial No :							
Volt Input		LN: 0-300V AC LL : 0-600V AC	RS 485	Aux. Supply 85 - 265 VAC			
V _R	V _Y	V _B	V _N	A	B	L	N

2.4) Communication:

2.4.1) Communication Interface:

- Through RS485 Communication with MODBUS RTU with Baud Rate 9600
Power Line Communication using Power Line Node and Concentrator.

Note:

- (i) Field Programmability of the meter is optional based on the customer requirement,
- (ii) Each meter is given a unique number at the factory.

2.5) Safety Precautions:

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- Only qualified electrical workers should install this equipment. Such work should be performed only after reading this entire set of instructions.
- If the equipment is not used in a manner specified by the manufacturer, the protection provided by the equipment may be impaired.
- NEVER work alone.
- Before performing visual inspections, tests, or maintenance on this equipment, disconnect all sources of electric power.
- Assume that all circuits are live until they have been completely de-energized, tested, and tagged.
- Consider all sources of power, including the possibility of back feeding.
- Turn off all power supplying the dual energy meter and the equipment in which it is installed before working on it.
- Always use a properly rated voltage sensing device to confirm that all power is off.
- Before closing all covers and doors, inspect the work area for tools and objects that may have been left inside the equipment.
- When removing or installing panels do not allow them to extend into the energized bus.
- The successful operation of this equipment depends upon proper handling, installation, and operation.
- Neglecting fundamental installation requirements may lead to personal injury as well as damage to electrical equipment or other property.
- NEVER bypass external fusing.
- NEVER short the secondary of a PT.
- NEVER open circuit a CT
- High voltage testing may damage electronic components contained in the dual energy meter.
- Ensure that no wiring strands are straying outside after connecting the wires.
- Dual Source Energy Meter should be installed in a suitable electrical enclosure.

Failure to follow these instructions will result in death or serious injury

Technical Specifications

Accuracy	: Class 0.5S
System type	: 3 Phase 4 Wire
Resolution	: 0.01 (for Combined Kwh, KVAh)
Display	: LCD (3 ROW)
Auxiliary Supply	: 85 – 265 VAC
Current CT	: Primary side – Programmable (5A – 6000A) : Secondary side – 1 or 5A
Starting Current	: 10mA
Power Factor	: 4 quadrant operation
Frequency	: 50Hz, $\pm 5\%$
Communication	: RS485 Communication with MODBUS RTU in external integration with Power Line Communication
Temperature	: Operating Temp. – (-10 to 55)°C Storage Temp. – (-20 to 70)°C Humidity 5 to 95% RH at 50°C (Non-Condensing)
Dimension	: (96 x 96 x 48) mm (Inclusive of connector)
Panel Cutout	: 92 x 92 mm (-0.5mm)
Mounting	: Panel Mountable
Connector Type	: Screw type terminals (U Lug 2.5mm)
Weight	: 350gms. (app.)